
SETUP GUIDE: MOON USB HD Driver for Windows 7, 8, 10

MOON Nêo 260D

MOON Nêo 350P D²

MOON Evolution 650D

MOON 300D v.2

MOON Nêo 340i D²

MOON Nêo 380D (non DSD)

MOON Evolution 750D



M O O N

Musical Ecstasy

USB HD Driver v3.20.0

_____ : MOON_USB_HD_Audio_DriverSetup_v3.20.0_Win7+.zip

_____ 가 _____ : MOON Nêo 260D with DAC option
MOON Nêo 340i with D² DAC
MOON Nêo 350P with D² DAC
MOON Nêo 380D DAC (**non DSD**)
MOON 650D DAC
MOON 750D DAC
MOON 300D v.2 DAC

_____ : USB DAC 가

Windows : **MOON_USB_HD_Audio_DriverSetup_v3.20.0_Win7+.exe**

MOON 300D v.2, Neo 380D, 650D/ 750D DAC, 340i/ 350P D² 24-bit/192kHz
_____ 가 _____ .

MAC OS-X(v10.6.4) , 가 _____ .
MAC OS USB _____ .

_____ :

"Completing the MOON USB HD Audio v3.20.0 Setup Wizard" "Finish"가
_____ Windows 가 _____ .

_____ :

Windows Vista, 7, 8 32 , 32 " "


_____ , MOON USB DAC Windows 32
_____ 가 _____ , Windows

_____ DAC , Windows " "
"foobar2000" USB DAC 가 _____ , "JRiver Media Center"


(Windows Windows API) USB DAC, ASIO() WASAPI

가 , " " " " " , "MOON USB HD Audio"

가

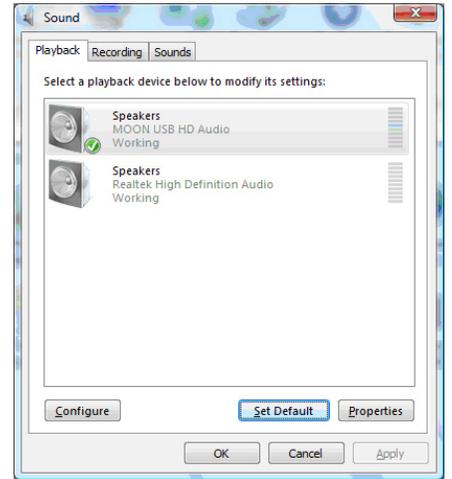

" , " " " 가 " "

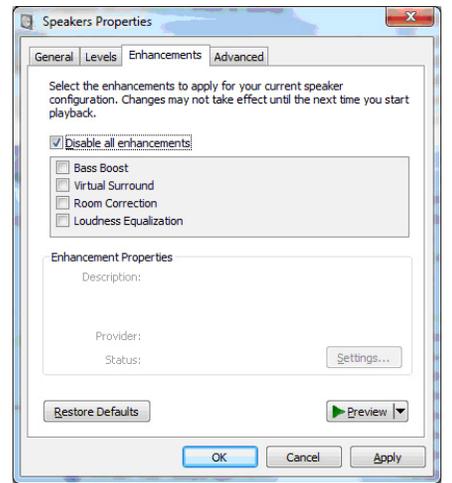

" , " "

